


N 70, FULLY-INTEGRATED DISHWASHER, 60 CM,
TALL TUB
S287HDX01A



Dishwasher with a third loading level basket for mugs, bowls and odd shaped items plus the comfort of door opening with a light push and Wi-Fi connectivity.

- ✓ Chef 70°C - The program for getting stubborn residues off pots and casserole dishes.
- ✓ Door Open Assist - Just push the door gently to open.
- ✓ Height Adjustable Top Basket - Enables multiple height settings, which can be particularly useful for maximizing space.
- ✓ Time Light - The time remaining in the programme is projected onto the floor.
- ✓ Flex 3rd Basket – Flexible basket with knife inlay and space for everything beyond cutlery

Maximum number of place settings: 14
 Water consumption in litres per cycle of the eco programme: 11.4 l
 Built-in / Free-standing: Built-in
 Height of removable worktop: 0 mm
 Required niche size for installation (HxWxD): 865-925 x 600 x 550 mm
 Depth with open door 90 degree: 1200 mm
 Adjustable feet: Yes - all from front
 Maximum adjustability feet: 60 mm
 Adjustable plinth: Both horizontal and vertical
 Net weight: 44.8 kg
 Gross weight: 47.0 kg
 Connection Rating: 2400 W
 Fuse protection: 10 A
 Voltage: 220-240 V
 Frequency: 50; 60 Hz
 Length electrical supply cord: 175 cm
 Plug type: AU plug
 Length inlet hose: 165 cm
 Length outlet hose: 190 cm
 EAN code: 4242004257509
 Installation type: Fully Integrated



N 70, FULLY-INTEGRATED DISHWASHER, 60 CM,
TALL TUB
S287HDX01A

Design

- Stainless steel interior tub
- SoftTouch buttons: Electronic soft-touch activated buttons
- Hidden control buttons - integrated into the top of the door
- Timelight: remaining wash cycle time is projected on to the floor whilst the dishwasher is operating
- doorOpen Sensor - a push top open door system, perfect for handleless kitchens

Programs and functions

- 8 Programmes:
- Eco Wash: Energy efficient wash & dry for mixed loads & soil levels,
- Auto wash: automatic wash & dry for mixed loads & soil levels,
- Auto 35-45: for delicate items and lightly soiled dishes,
- Chef 70: for heavily soiled and crusted plates, pots and dishes,
- 1 hour wash: wash & dry program for mixed loads & soil levels,
- Quick 29minutes (with use of rinse aid): express wash only for lightly soiled dishes,
- Silence: extended wash and dry quiet cycle for mixed loads & soil levels,
- Favourite: set or download your favourite combination
- 4 special options: Remote Start: allows remote control and monitoring via HomeConnect, Extra Dry: Provides an even better drying result by extending the drying time, Intensive Zone: Transform the bottom basket into a powerful cleaning zone with higher water pressure and temperature, Speed: Reduce the wash time, up to 50% faster, with no impact on wash performance.
- Easy Clean option
- Silence on demand (via app)

Features

- Capacity : 14 place settings place settings
- Very quiet operation: 42 dB
- Basket system with coloured touch points provides total flexibility for all loading requirements
- Extra space 3rd rack for odd shaped items, bowls, mugs and large utensils
- RackMatic 3 stage height-adjustable top basket, can be positioned at an angle for washing large plates in the bottom basket and tall stem wine glasses in the top basket
- Anti slip protection in upper basket
- Rack Stopper to prevent derailing of bottom basket
- 6 foldable plate racks in top basket, Height of dishes in top basket - min/max 18,0 cm / 21,0 cm
- 8 foldable plate racks in bottom basket, Height of dishes in bottom basket - min/max 33,0 cm / 28,0 cm
- Removable knife shelf in 3rd basket
- Moveable cutlery basket in lower basket
- Glass rack in lower basket for tall stemmed glasses

Technical information

- 4 stars energy rating, 5 Star Water rating (WELS). D02568.
- Water consumption of 11.4 litres per wash using Eco AU in

accordance with AS/NZS 6400 and Energy consumption of 230 kwh per year using the Eco AU program seven times per week. Consumption is based on cold water connection and is tested in accordance with AS/NZS 2007.2

- 11.4 l water consumption per wash based on Cold water connection, using Eco Wash program. In accordance with AS/NZS 6400
- Height 865-925 mm x Width 598 mm x Depth 550 mm

Additional information


- hydroDry heat exchanger assists with condensation to help dry dishes
- AquaSensor® automatically adapts water usage depending on the degree of soiling
- DosageAssist ensures perfect cleaning results with every wash cycle. The tablet is dropped into a specially engineered tray and is completely dissolved
- Efficient SilentDrive long life brushless motor
- 5 Spray levels for maximum water contact and optimum wash results
- 3 stage self-cleaning filter system: design that helps reduce the need to wash the filter and prevents blockages
- HomeConnect via WiFi Connectivity
- End of program audible signal
- Electronic delay timer: 1-24 hours
- Neff AquaStop® water supply device with anti-flood protection

Optional accessories

- Red large item spray head included for washing extra large items such as baking trays and rangehood filters, Vapor barrier plate included

N 70, FULLY-INTEGRATED DISHWASHER, 60 CM,
TALL TUB
S287HDX01A

measurements in mm

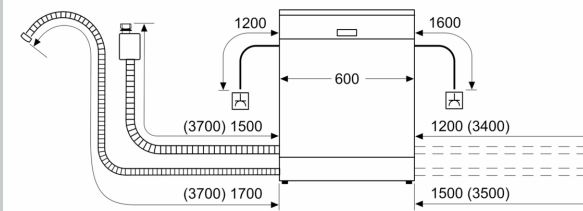

△ socket
() values with extension kit

